

ODOUR FILTER INSTRUCTION

SYSTEM DESCRIPTION

Odour filter is an optional accessory for the TECMEN Freflow PAPR. The odour filter helps to reduce nuisance odours during cutting, burning and welding applications.



WARNING




- This product is one component of an approved respiratory protection system. Always read and follow all User Instructions supplied with system in order to ensure correct system operation. Failure to do so may result in injury, sickness, or death.
- The TECMEN Freflow PAPR system is not intrinsically safe. Do not use in flammable or explosive atmospheres, doing so may result in serious injury or death.
- Always correctly use and maintain the filter assembly. Failure to do so may reduce respirator performance, overexpose you to contaminants, and may result in sickness or death.
- The odour filter can not be cleaned. Stop using it immediately when smelling peculiar smell and replace it until you are in a safe area.
- Stored at a temperature between -10°C to 55°C (14°F to 131°F), in a clean environment without direct light.

ASSEMBLING THE ODOUR FILTER

Please install all the filter components according to the image below.

The odour filter must always be used with the particle filter, pre-filter and spark screen. Do not use the odour filter alone.

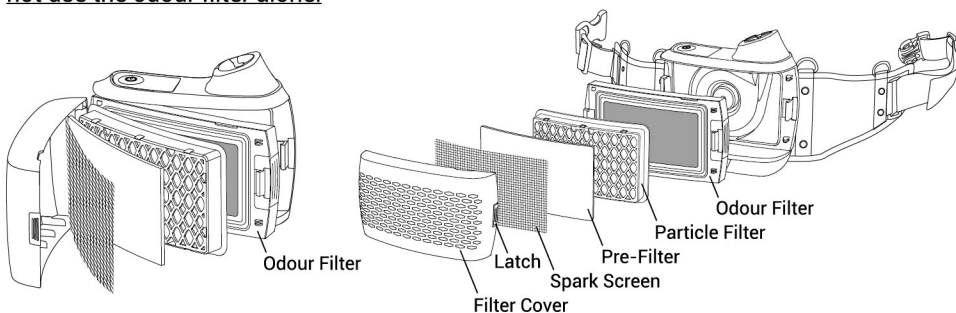

REPLACING THE ODOUR PAD

The odour pad may be replaced by pressing the expired odour pad out on the vertical edges, nearest to the frame edge, and then work the entire odour pad free from the assembly according to the image below. Install a new odour pad by pressing it into the odour pad assembly.

