


Gas Filter Instruction

WARNING

- Please read combined with FreFlow unit user instruction, pls make sure you are fully understood the manual before use.
- This gas filter must be always used together with FreFlow particle filter. The gas filter give additional protection against certain gaseous environment. (See the table below)
- The filter assembly must be installed properly as per instruction guide.
- The particle filter and gas filter cannot be cleaned. Replace with new ones if damaged or dirty.
- Storage temperature range: -10 °C to +55 °C, R.H. < 85%

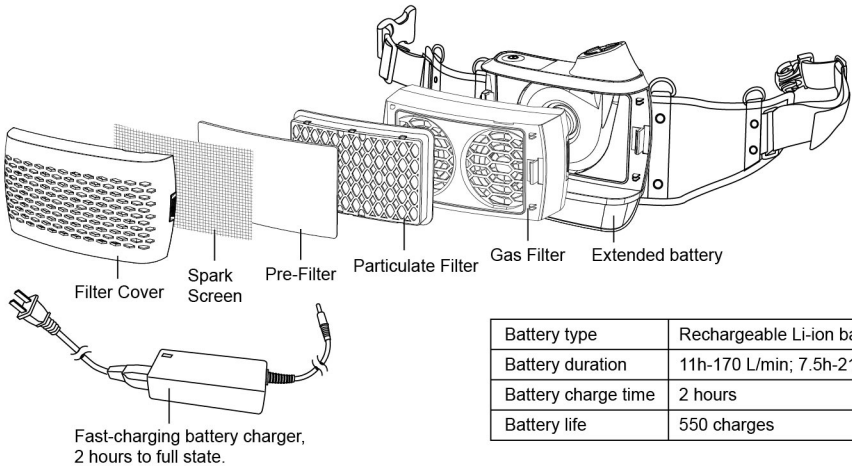

| | |
|---------------------|-------------------------------|
| Battery type | Rechargeable Li-ion battery |
| Battery duration | 11h-170 L/min; 7.5h-210 L/min |
| Battery charge time | 2 hours |
| Battery life | 550 charges |

MARKINGS ON THE EQUIPMENT

| Marking | Part No. | Color Code | Protection Against |
|----------|-------------|-------------------------------|--|
| P (R SL) | V1P3 TM3 00 | White | Particulates (R=replaceable, SL=test against sodium chloride and paraffin oil) |
| A1B1E1K1 | V1GF TM3 00 | Brown / Grey / Yellow / Green | Organic gases / Inorganic gases / Sulfur dioxide, acidic gases / Ammonia and organic ammonia derivatives |

Read the instruction before use.

Expiry date year / month.

CE0194 The particle and gas filter are marked according to EN12941:1998.